



MP (Metal Professional) counter alignment


measuring wheels



Locate the flapper.


Counter not reading right?

Check your flapper alignment!

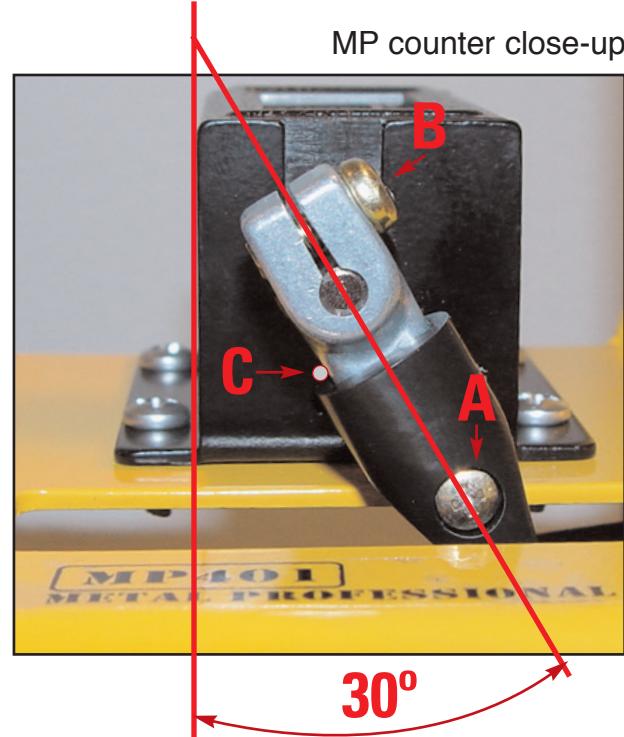

(If you're replacing the flapper, undo the A screw and put on the new flapper. Replace screw "A".)

Adjust the angle of the flapper if necessary. Loosen the B screw and adjust the angle of the flapper to 30° . If you look directly at the counter from the side, align the flapper so that you can just see the circle (C) on the counter box. It is not red on your counter, it is black.

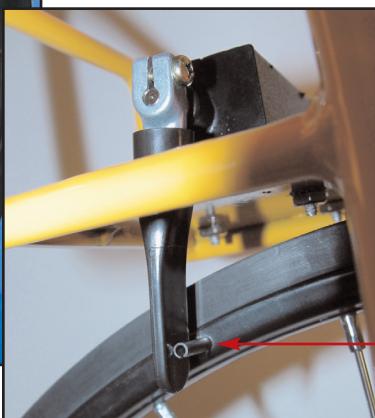

Test it by rotating the wheel slowly. The counter should tick off a foot when the pin is about 1/4" from the bottom tip of the flapper.